

Solarus **REMOTE CONTROL** User Guide



BUTTON	LIVE TV	FROM THE GUIDE
TV	Power TV on/off	Turn TV on/off
Setup	Activate remote control backlight	-----
CBL	Power STB on/off (after pressing TV button)	Turn STB on/off
Rewind	Rewind current program	View previous guide listings
Skip Back/Forward	Move back/forward :10 in program	-----
Pause/Play	Pause/Play program	-----
Fast Forward	Move ahead in program or recording	View future guide listings
List	View list of recorded programs	View list of recorded programs
Rec	Set DVR to record	Set DVR to record
Menu	View system menu	View system menu
Info	View ch name, time remaining/ ch playback eligibility; press 2x for additional detail	View detailed program info
Guide	Display program guide	Return to live TV
Exit		Close current menu & return to program
Up Arrow	View info on next highest channel	Scroll up in guide
Down Arrow	View info on next lowest channel	Scroll down in guide
Right Arrow	View info on what's next on current ch	Scroll forward in guide
Left Arrow	Search	Scroll back in guide
Last	Return to last channel watched	Return to live TV
Red Button (A)	Weather data	Schedule recording
Green Button (B)	View recent calls	Watch from start
Yellow Button (C)	Weather/What's hot	Search by program or actor name
Blue Button (D)	-----	Toggle through favorites list/ch by category
Day- / Day+	-----	View future or past days' guide listings
Page- / Page+	Pause program/View time left	Navigate up or down in guide
CC	Display closed-caption text	Display closed-caption text

TECHNICAL SUPPORT:  **888-676-8638**  **support@solarus.net**

PROGRAMMING YOUR REMOTE

INSIGNIA

0171,1204,1326, 1564, 1517, 1963, 2002

LG

1265, 0178, 0442, 0700, 0829, 0856,
1178, 1325, 1423, 1758, 1993

MAGNAVOX

1454, 0054, 0030, 0706, 1963, 1944,
1525, 1254, 1198, 0802, 0386, 0230,
0187, 0186, 0179, 0096, 0036, 0028,
0024, 0020

PANASONIC

0250, 0051, 0055, 0162, 0226, 0338,
0375, 0650, 1291, 1410, 1941, 1946, 1947

PHILIPS

1454, 0054, 0690, 1154, 1483

SAMSUNG

0060, 0812, 0702, 0178, 0030, 1903,
1575, 1395, 1312, 1060, 0814, 0766,
0427, 0408, 1618, 0329, 0056, 0032,
0019

SANYO

0154, 0088, 0107, 0146, 0159, 0232,
0484, 0799, 0893, 1142, 1618

SHARP

0093, 0039, 0153, 0157, 0165, 0220,
0281, 0386, 0398, 0491, 0688, 0689,
0818, 0851, 1602

SONY

1100, 0000, 0011, 0080, 0111, 0273,
0353, 0810, 0834, 1317

VIZIO

0864, 0885, 1499, 1756, 1758

WESTINGHOUSE

0885, 0889, 0890, 1282, 1577

During your install, the technician will program your remote to the STB. However, if you purchase a new TV, you may need to pair your Solarus TV remote to the new TV. Follow the steps below to set up your remote. Be sure to point the remote at your TV during setup.

Option 1: Program Remote with Code Search

1. Press the TV button.
2. Press and hold SETUP until the TV button blinks twice (about 3 seconds).
3. Using the numbers on the remote, enter 9 7 2 CH+; the TV button should blink twice.
4. Press the TV button; it should blink once.
5. Press and hold SETUP until the TV button blinks twice.
6. Press 9 9 1; the TV button should blink once
7. Press the TV button
8. Slowly and repeatedly press Ch+ button until the TV turns off. (the remote is searching for correct code)
9. Once TV has turned off, press the SETUP button to lock in the code; the TV button should blink twice
10. Press the TV button to power your TV on. If the TV turns on, you have successfully programmed your remote. If it does not, manually turn the TV on and repeat steps 4-10 again.

Option 2: Program Remote with Direct Code

1. Press the TV button.
2. Press and hold SETUP until the TV button blinks twice (about 3 seconds).
3. Using the numbers on the remote, enter 9 7 2 CH+.
4. Press the TV button.
5. Press and hold SETUP until the TV button blinks twice.
6. Reference the chart to the left. Enter the 1st code for your brand of TV.
7. Press the TV button. If the TV turns off, setup is complete. If it does not, repeat steps 4-7 using the next code for your TV brand.

Note: TV or Cable button will blink 5 times upon press of any button when your batteries need to be replaced.

TECHNICAL SUPPORT:  888-676-8638  support@solarus.net